



Arranging pump and ceramic flat filter housing in the bowl

The pump can be placed beside or at the high end of the ceramic flat filter housing; please be sure to run the tubing around the housing, NOT over it. Please place the housing as shown in the pictures relative to the notch for the pump cable at the back of the bowl.

To avoid damaging your fountain, please be sure to carefully place (and not drop) the filter housing into the bottom of the bowl.

The tubing is as long as it is so you can put the lid down next to the bowl (I would use a folded towel to rest it on.) You can then easily press the pump in place so the suction feet attach to the bottom of the bowl (you can push the ceramic flat filter a little to the side if you need to while you're working). And to release the pump, you just grab the body of the pump (never pull by the cord as this will eventually cause a loose connection) and gently tilt to one side to disengage the feet from the bottom of the bowl. The pump will work best (and be quietest) when it is attached to the bottom of the bowl.

When you put the lid back on (aligning the spout of the lid and the notch at the back of the bowl), the tubing will just naturally wrap around the closed end of ceramic flat filter housing. You should be able to see the white filter pad under the round hole in the lid where the sieve sits. With the layout below, that hole will be just above the high end of the flat filter, which is a good place for it to be.

